
DADO creations europe


Installation guide freestanding bathtubs

How to install a freestanding bathtub:

- Ensure that the drain pipe in the floor is thoroughly cleaned before the bath is placed into position and that the waste hole is positioned correctly.
- Before the bath is fixed to the floor ensure that the floor is level, and the bath waste and the drainage pipe line up.
- Make sure all the surfaces are dry and stable before installing the bathtub. This will ensure durable adhesion.
- Mark an area with tape or pencil on the floor where the bathtub is going to stand with the template provided, the floor can now be properly prepared.
- Position the bathtub and connect the waste, use a spiritlevel to ensure that the bathtub is level. Fill the bathtub with water, let the water run through the waste and check for leaks.
- Apply silicone around the base of the bathtub to ensure that the bath does not shift.

Tools

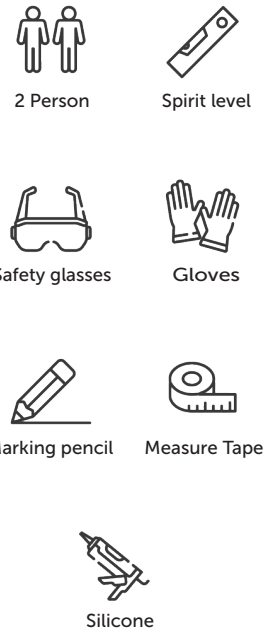

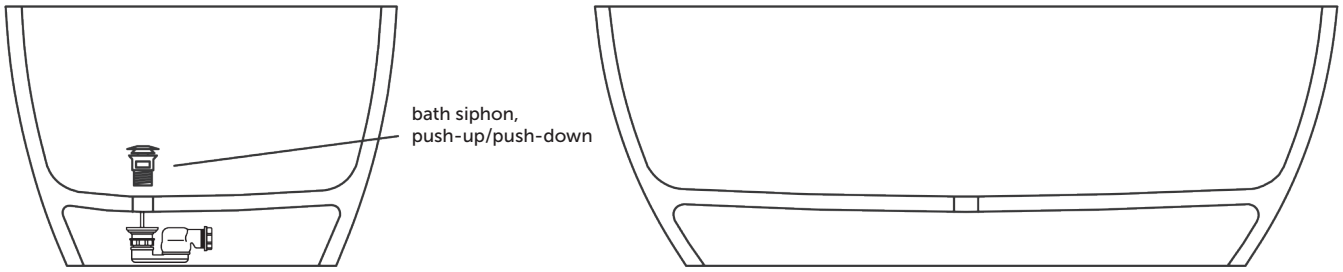

You need min 120 mm ↕ / 250mm ↔ installation space under the bath. Check the specifications of the bath model for installation space.

⚠

- This bathtub is made of DADOquartz. The tubs weight may vary. We recommend that the installation be done by 2 people, as a security precaution.
- The diagrams in this guide are not construction plans; they are visual aids.
- This bath can only be installed in a suitable space and on a watertight floor. Ask your certified installer for the applicable conditions.

DADO creations europe

Installation guide freestanding bathtubs with feet - Lily

Feet installation on a freestanding bathtub:

- There are three different options for the Lily bathtub with feet: claw feet, modern feet and ball feet.
- Turn bathtub upside down on a clean carpet or blanket.
- Place feet on points A & B as indicated on figure 2.
- Place the feet on the bottom of the bathtub and seal with silicone adhesive matching the colour if the bathtub.
- Leave to dry for 24hrs.
- Turn the bathtub upright and using a spirit level check that bathtub does not wobble and stands sturdy over the drain waste line.

Plumbing installation:

- Plumber inserts plug into waste hole of bathtub. Do not overtighten.
- Connect the drain outlet pipes including the P-trap to the underfloor drain system.
- Connect the drain outlet to the waste installed step 1.

Tools


2 Person


Spirit level


Safety glasses


Gloves


Marking pencil


Measure Tape


Silicone


Clean Carpet

fig. 1


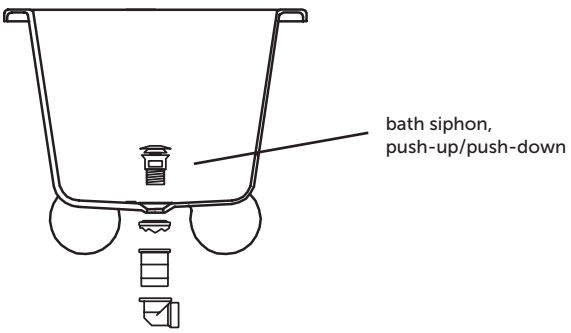


fig. 2

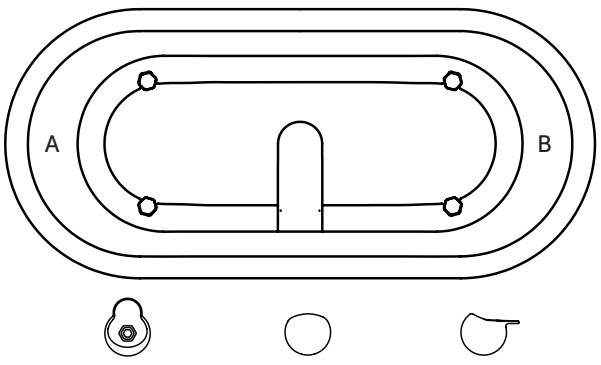

⚠

- This bathtub is made of DADOquartz. The tubs weight may vary. We recommend that the installation be done by 2 people, as a security precaution.
- The diagrams in this guide are not construction plans; they are visual aids.
- This bath can only be installed in a suitable space and on a watertight floor. Ask your certified installer for the applicable conditions.